 
 



**1** Insert the tabs of bottom **c** into the slots of **c**. Push down on **c** firmly.

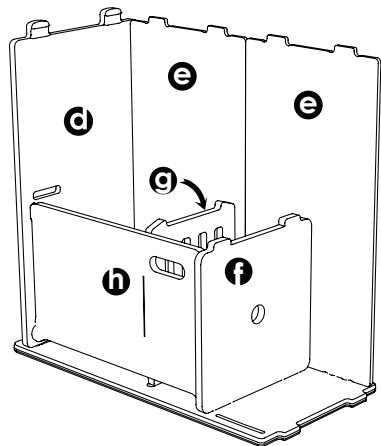


**2** Lay **c** on its side, and insert **e**, **f**, **g** and **h** as shown above.

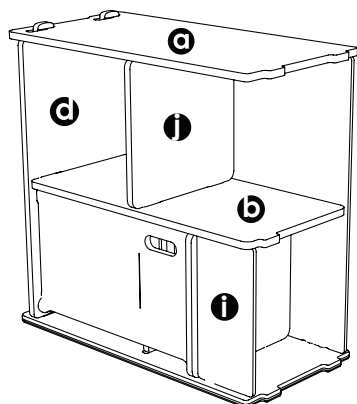

 **3** Insert **i**, **b**, **j** and **c**. Place slots of side **c** over **c**'s tabs, with slots for **j** facing inward.

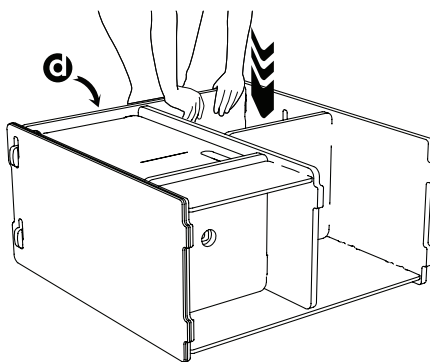

 
**4** Lay the kitchen set on its back, and tighten both lock joints on bottom **c**.

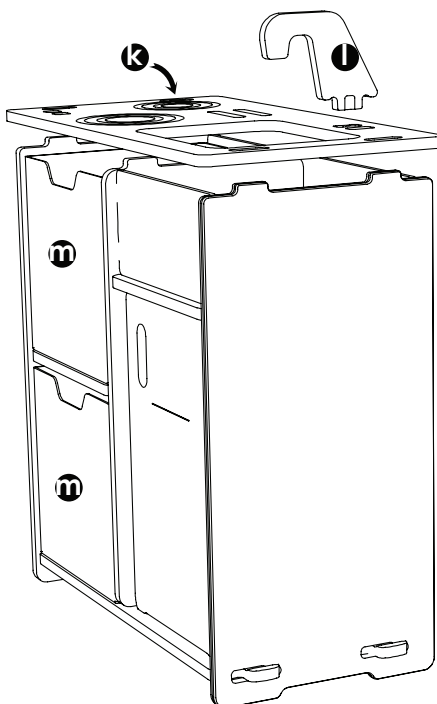

**5** Place the kitchen upright and push **k** into place until joints are tight. Place **l** into corresponding slot and insert bins **m**.


**sprout**

 www.sprout-kids.com

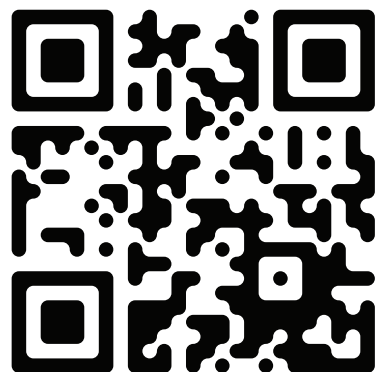

sqr.so/kita

 
see online assembly video & more

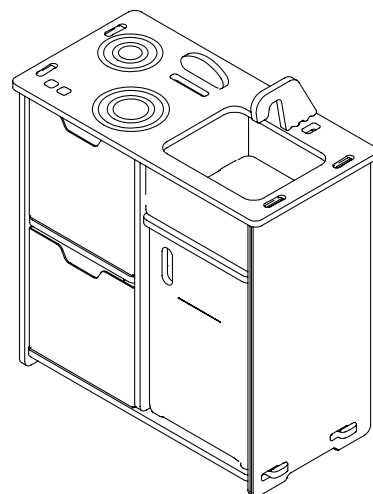


**!** Adult assembly only

**!** Assemble completely before use


## Parts

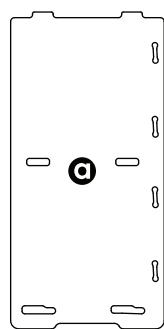 


Kitchen Left Side  
VS006LX

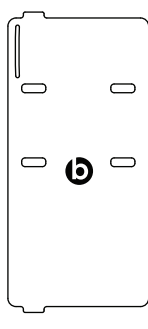 


Kitchen Center  
CS004KX

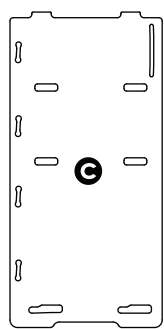 


Kitchen Right Side  
VS005RX

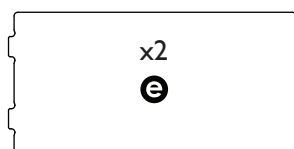 

Kitchen Back  
BK002KX

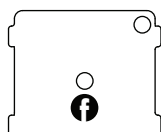 

Kitchen Front  
BK005KX

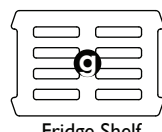 


Shelf  
CS001KX




Hinge Shelf  
CS002KX



 Fridge Shelf  
CS003KX




Fridge Door  
DR004KX

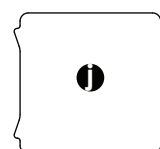 


Bread Board  
MS001KX



 Bread  
MS002KX

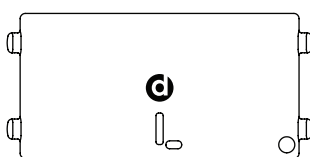


Kitchen Bottom  
HZ003KX

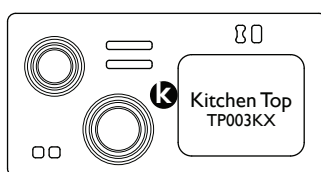 

Kitchen Top  
TP003KX



 Faucet  
MS003KX

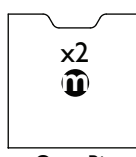

Oven Bin  
BN010MW